

Quick Guide

Welcome to your Daikin Altherma Central Heating System.




Warning:

Never let anyone work/maintain the equipment who is not a Space Air Daikin Altherma approved engineer. Failure to adhere to this will effect your warranty.

See page 10 of your user manual for more details.

Quick start - Heating:

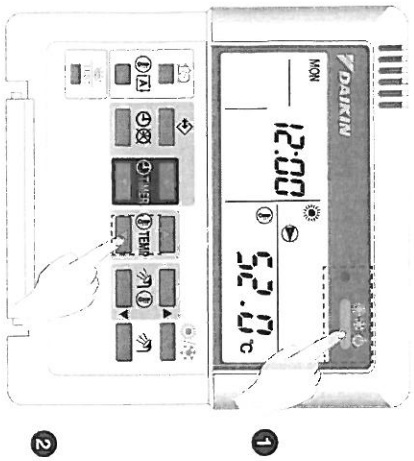

- 1 To switch on the heating press the **ON/OFF** button. To switch off the heating press the **ON/OFF** button.


- 2 To set heating temperature press button **UP ▲** or **DOWN ▼** to raise or lower heating temperature.

We recommend that you leave your controller in 'auto mode' **[A]** for optimal efficiency.

[Shade position for job number, model number and serial numbers]

If you do not have these details you do not have a maintenance contract. Call the number below to obtain.

Quick start - Domestic Hot Water:

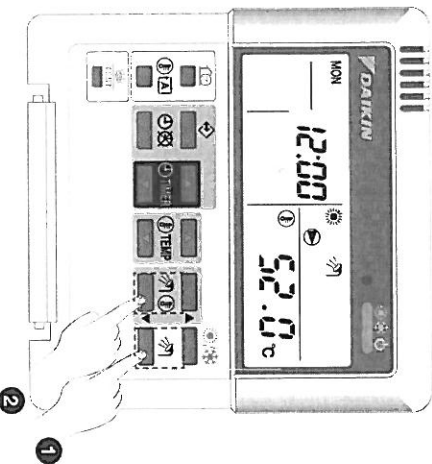

- 1 To switch on and heat the water in the hot water cylinder / tank press the **SHOWER** button. (The shower symbol will be displayed).

- 2 To change the cylinder / tank water temperature press the shower **UP ▲** or **DOWN ▼** to raise or lower heating temperature.

Your Space Air Daikin Altherma system from Active, is covered by a 3 year parts warranty if commissioned by Active and a maintenance contract is in place.

CALL: 01224 870 777

www.active24-7.com



SYMBOLS / DISPLAY	
	Space heating active
	Heating ON/OFF button disabled. Remote thermostat in use
	Sanitary hot water active
	Compressor active
	Circulating pump active
	Backup heater (Hydro box, used for heating only)
	Booster heater (Tank, used for hot water only)
	Temperature icon
50.0°C	Heating set temperature (default). Press the shower temperature button 2 once to display hot water temperature setting. <i>(This will display for a few seconds and default back to heating setting)</i>
[A]	If displayed means your heating temperature is in Auto mode. (temperature setting not displayed) (see user manual)
MON	Display current day of the week
12:50	Display current time (24hrs)
	Time clock active when displayed
BLANK	Will display setting during programming & fault code if it occurs (see user and installation manual)
BUTTONS	
	Heating only START/STOP (LED ON/OFF
	Heating only temperature setting <i>Note: will not display if [A] is displayed</i>
	Hot water only STOP/START will display if ON)
	Hot water only temperature setting <i>Note: press once to display current setting</i>
	Not in use for heating only systems
	For time clock programming purposes (see user manual)
	To activate and deactivate time clocks (see user manual)
	Silent mode (see user manual)
	To activate weather dependent water floating temperature (Note: When activated [A] will display and heating water temperature will not display - see user manual)
	For set-up of system only (Please do not use)